

TORLYS Cork Vista

DEAR CUSTOMER,

You have purchased a high quality **TORLYS Cork Vista** floor, well suited for all residential rooms, including bathrooms*. Please take a moment to review these installation instructions and plan your installation carefully. Please note that **IMPROPER INSTALLATION CAN VOID WARRANTIES**. Installation of 100 square feet (9 m²) of flooring is enough to verify quality and acceptance.

***TORLYS Cork Vista flooring is not suitable for use in SAUNAS or other abnormal use or conditions including, but not limited to, water damage from plumbing, storms, floods and excessive water saturation on the surface or trapped between subfloor and floor.**

IN BATHROOMS: the use of flexible silicone to seal the expansion and contraction space is mandatory.

If encountering difficulty during installation, STOP and contact TORLYS Customer Service at: 1-800-461-2573 and ask for the Technical Department.

Closed-in porches, solariums, screened in gazebos - ALL of these can experience rapid and unbalanced changes in the interior environment that cannot be properly controlled. Installation under these conditions is NOT recommended.

IMPORTANT: Protect flooring from direct sunlight to minimize fading.

IMPORTANT: Before starting the installation, please read carefully this entire document.

SET UP

To ensure you have sufficient material on hand, calculate the total area of the room and add 5% of material to allow for custom cutting. Forty-eight hours prior to installation, place the closed packages in the middle of the properly conditioned room (see **Layout** section), **NEVER** against a wall or in a corner, nor near hot or cold air-vents or in direct sunlight. Do not open the packages until you are ready to begin installation. Flooring is to be stored on a flat floor to prevent distortion. Inspect each plank before installation. If you find any defects, do not use the plank. Contact your supplier immediately.

Please Note: The TORLYS Warranty does not cover labour for installation of planks with visible defects.

IMPORTANT: Cork is a natural material and therefore no two planks are alike... this adds to its beauty. **Some variation in grain, colour and shade, as well as knots and mineral streaks, should be expected.** Always work from several boxes at the same time and shuffle planks for the best appearance.

PREPARATION

Remove existing carpet, baseboards, quarter-rounds and thresholds. Undercut door jambs using a piece of flooring material (plus any underlay, if necessary) as a guide.

Repair all defects in the subfloor. Additional expansion and contraction space can be achieved by undercutting drywall.

CHECK THAT:

- The job-site has been cleaned and cleared of debris that could potentially damage the finish of your TORLYS floor.
- The doors can still open and close after installing the floor.
- Doors may have to be cut to supply sufficient clearance.
- The door jambs may need to be adapted to install the floor under them.
- For aesthetic appearance we suggest that you measure the width of the room to ensure that the width of the pieces of the first and last row is approximately the same and not less than 3" (7.5 cm). Cut the width of the pieces of the first and last row as needed.

SUBFLOORS

Repair any defects in the subfloor. Installation over an uneven subfloor will cause premature damage to floor and make the floor feel unstable. All subfloors must be clean, firm, flat (within 3/16" - 4.8 mm in 10 ft - 3 m), smooth and dry.

The moisture on concrete slabs must be equal or less than 75% Relative Humidity with an *in-situ* probe as per ASTM F2170, 12% or less on plywood. You can lay the planks over a solid and stable subfloor material that meets these requirements. It is essential that the crawl space under subfloors is sufficiently ventilated. Remove any obstacles and provide sufficient ventilation. A 6 mil (0.15 mm) poly vapour barrier must be installed on crawl space floor.*

** In construction terminology, a crawl space is defined as: "a shallow space below the living quarters of a house, normally enclosed by the foundation wall..."*

LAYOUT

The floor should be installed from several cartons at the same time to ensure colour and shade mix. If possible, lay the planks parallel to window light. **The ideal environment is a temperature of 60 °F - 70 °F (16 °C - 21 °C) and relative humidity of 40 - 60%.** The floor will be stronger and more stable if the joints are staggered at least 8" (20 cm) in each row. Staggered or irregular joints result in less waste and enhance the overall appearance of the floor. Do not stair step the flooring across the room. All mouldings, door frames, etc., should be undercut to allow an expansion and contraction space around the entire perimeter of the floor. Be sure to leave the minimum 1/2" (13 mm) expansion and contraction space on all sides of the floor, around pipes, thresholds, under doors and around any fixed objects (floor vents, kitchen cabinets/islands, etc.). Kitchen cabinets/islands should not sit on the flooring as this will prevent natural expansion and contraction due to climate fluctuations. Any wedges should be removed after the flooring installation has been completed, and the expansion/contraction space should be covered by baseboard, quarter round/shoe mould, and/or drywall (if wall is undercut).

NOTE: Never hit the planks directly with your hammer or rubber mallet. Always use a **TORLYS Tapping Block or TORLYS Bulldog™ tool**** to protect the edges of the planks. Make sure the Tapping Block is in good condition. Hold Tapping Block down when using it.

TOOLS

- Hammer (1 lb.)
- Tape Measure
- Pencil
- Saw, utility knife
- Tapping Block*
- Last-Board Puller*
- 3/8" (10 mm) Wedges*
- Mask (3M™ Tekk Protection™ Sanding and Fibreglass Disposable Respirator, 8200HB5-A), or equivalent.



When sawing pieces off the planks, use a fine-toothed hand saw, jigsaw, chop-saw or guillotine.

***Note:** available in a TORLYS Installation Kit

****OPTIONAL:** for ease of installation and repairs use TORLYS Bulldog™ tool.

FLOATING METHOD

Prepare the subfloor. **TORLYS Cork Vista** has a built-in cork backing and therefore no additional underlayment is required. When installing **TORLYS Cork Vista** over cementitious subfloors, first cover the subfloor with 6 mil (0.15 mm) poly vapour barrier, overlap edges by 12" (30 cm), damp-proof tape the seams and run up 4" (10 cm) on each wall. The use of 6 mil poly directly under the flooring is recommended for all installations; in case a repair is needed, the poly will make it easier to disassemble the floor.

The use of a 6 mil (0.15 mm) poly vapour barrier is mandatory for all installations over all cementitious subfloors.

DO NOT USE GLUE.

PREVENTATIVE MAINTENANCE

To ensure the full benefit of your **TORLYS Cork Vista** floor and to extend its beauty for years to come, we recommend the following preventative maintenance suggestions:

- **Install floor protectors** on furniture legs to protect against scratches and dents. These furniture pads should have no wrinkles and be made of soft, non-staining material (e.g. felt pads); the felt pads should be of adequate size to support the weight of the furniture and a minimum of 1" (2.5 cm) in diameter. The floor protectors should sit flat on the floor and be inspected periodically for cleanliness and wear. For heavy pieces of furniture (e.g. couches) the use of coaster-cups is recommended. Chair mats for hard-surface floors are also recommended.

- **DO NOT DRAG FURNITURE** or other heavy objects on the floor. Avoid high heels or shoes that need repair. Some types of high heel shoes can severely damage the surface of any floor covering. For minor scratch repairs, a touch-up kit is available at your TORLYS Dealer. For damages that require plank replacement, the TORLYS Bulldog™ tool, is also available through your dealer.
- **Close your curtains or blinds** where continuous or extreme sunlight will shine on your floor. Also UV protection in windows will help with the performance of your furnishings. A combination of heat and sunlight can cause most furnishings and flooring to fade or change colour.
- **Sweep and vacuum floor regularly.** Use correct hard surface vacuum tools. DO NOT use rotating beater bars, floor scrubbers, steamers, jet mops, buffers or similar products.
- **Wipe up spills immediately.** DO NOT allow topical moisture to remain on the floor longer than the time specified in the product warranty.
- **Avoid sand and grit build up.** At doorways and areas of heavy wear, use protective mats or rugs that are marked "non-staining". For dry maintenance, use a dust mop, vacuum cleaner or dry cloth. For damp maintenance, use the TORLYS EcoCare Cleaning Kit, available from your Authorized Dealer, and follow the maintenance instructions on the container.

Never wax or use oil-based products on your **TORLYS Cork Vista** Floor.

Spot cleaning is with a damp cloth.

IMPORTANT: To keep your warranty valid, use TORLYS recommended maintenance products and follow TORLYS maintenance instructions. For more information on maintenance products and instructions go to: www.torlys.com


Maintain the humidity level at 40 – 60%. Certain regions have extreme changes in humidity levels, which may affect all natural floors. To maintain humidity within a healthy range, a humidifier or dehumidifier may be required. Gapping can occur in natural floors with seasonal fluctuations and when in extremely dry conditions (Low R.H.).

Lb{cw ; /cLhb{

MÚ D9b9w ! [

TORLYS Cork Vistar K1-ã 1-; y10f0+ äëäüSY f2w lyäü1-ft1y3
f2f1-ü1y3 f22wä ø1uK2dzü 3f2dzS0 LyäüS1-Rz lü dzäSä 1-y1y3SY1m2dzä
ü2v3dzS 1-yR 3w220S äëäüSY ü2 w0f20100 üKS 1y11-v1ä ü23SÜKS1u0

La t h w e ! b e y ! a š I - K I - Y Y š N U ! y - r š ū K š ā l š Ō m - f c h w [, { c l - l J L J a y š
 . f 2 0 1 2 N c h w [, { . d z f r R 2 3 ^{e a} u 2 2 t b š ū š N U d z ā š I - y e 2 ū K š N ū ū I - l J L J a y š
 ō f 2 0 1 3 I - ā l ū Y I - è R I - Y I - ē š ū K š l J f - y l ā o

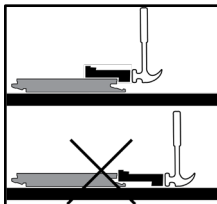[illegible]

!ú chw[. {Lb{¢![[!¢Lhb YL¢

ó² ŠŘĚŠš ċhw[{ ú·LJLJλV ēfzŎ} l·vř fl·ăúπōz l·NŘ LjdzffŠNŎ

0 chw[. { a !lb¢9b! b/9 twh5 ! /¢{


óchw[, { 9Ǿz / I-NUŠ ÓLJ I bŠdzúNI-fú / fŠI-yŠN6

/ú \$hw[, { . ; [[5hD\$^a \$hh[

50 c a l [ɔ l ɒ m p a a u t h [, ± ! t h ; w . ! w w l 9 w ; b 5 9 w ! [[C [h h w f

HÚ / hww9/¢Lb{¢![[!¢Lhb

2 22R 1-yR 02Nw 1-Us 0KS LJWY 1-N0 02Y LJ2ySfYdA 2T 02dzN TORLYS
Cork Vista f22NwYy0 {yA0S 0KS KdzYAR000 2T 1-N22Y 01-Y01-N00
 FN2Y 2yS aS1-a2y 02 0KS yS00z 0KS f22Nw Ydzau 0S 1-0fS 02
 S0L1-yR 1-yR 02y0U1-0U 1y ! [[RAN0002yA0 ! Y1y1YdzY 2T
mkH0 0M0 YY0 S0L1-yA02yK02y0U1-0U02y 0L1-0S Ydzau 0S LJW20ARSR
 1-0 1-ff 01-ff 1-yR 0S1N00A1-20a0Ndz0202yA 0eS0+ 1-N2dzYR LJWLSA 1-yR 1-0
 0KUSak2fR000 cKSaS 31-LA Y1-0 0S 020S1NSR 00 1-Y2dzfR1y3 0K1-0 1A
 y20 fA0SR 02 0KS 02Nw f22Nw 0dz0 02 0KS 01-ff0 LYau1-ff 0KS LJf1-y1A
 1y0KS a1-Y0S RAN0002y1A 0KS f2y3Sa0 01-f2 2N 0KS a1-Y0S
 RAN0002y1y 0K10K 0KS 03K0 1-f1fA2 f2N 1-Y2NS 1-LJWLS1-01y3 f220
 . S01yLYau1-f0Y3 0KS f22Nw FN2Y 0KS

[illegible]

¢w! b{L¢Lhb a h ; [5LbD{





[illegible]

MATCH TRANSITION MOULDINGS (e.g. Reducers)

[illegible]

ού €19 CLW{€ wh² {

{1-0 2FF ūKŠ ū2y3dzŠ 2T ūKŠ ʔANAUŋ LJfI-Yl 0z0K 2Y ūKŠ āK2W0 I-ā
 0Šff I-ā ūKŠ f2y3 ŠRŠŠ0 C2N0 I-ff 2ūKŠN ʔANAUŋN20 LJfI-Yl ā 0dz0 2FF ūKŠ
 ū2y3dzŠ 2Y ūKŠ f2y3 ŠRŠŠ 0tK202 L00 hNNAŠYŋ ūKŠ ʔANAUŋ LJfI-Yl lY
 ūKŠ NNA3K0 02N0YŠN 2T ūKŠ N22Y0
 a I-lYŋ I-lY I-Yl lY dz Y āLJ I-0lY3 2T
 MKH00 0M0 Y Y ūŠ dz ālY3 0ŠRŠŠā0 [I-ē
 ūKŠ LJfI-Yl ā 0NūK ūKŠ ū2y3dzŠ āRŠ (I)
 ʔI-0lY3 ūKŠ 0 I-ff lY 2NŋRŠN ū2 dz āŠ ūKŠ
 ū2y3dzŠ K2N220Š āēāŠY0 [I-ē ūKŠ ʔANAUŋ
 N20 I-f2y3 ūKŠ 0 I-ff 0y2ūŠ ūK I-ū I-Y
 ŠĖLJ I-YāI2Y āLJ I-0Š 2T I-Y lY lY dz Y MKH00
 0M0 Y Y ū Y dz āŠ 0Š LJN20RŠRŠ I-ū ūKŠ
 0 I-ff I-ā 0Šff I-ā I-ū I-ff 02dz Y Y āŠ
 KŠ I-ū lY LJLJŠāŠ R22NŋN I-Y ŠāŠ ŠŪ000

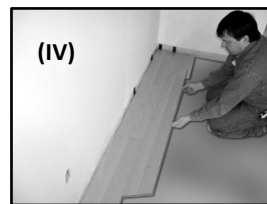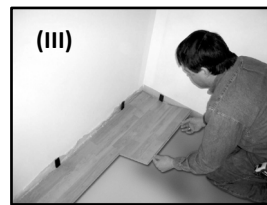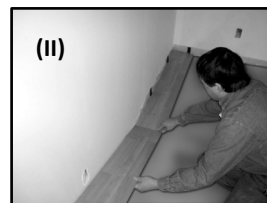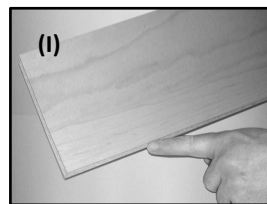

IMPORTANT

Բժշկական Լաբլի Կոֆիսթ ժնկ ւնի
 Տիր շնկ Կոն ւնի Ինստիթուտի
 Լաբլի / Ժնկ ւնի ւնի ւնի
 Գրանտ ւնի ւնի Լաբլի շ ւնի Բնակ
 Են թ Ինստիտուտ (II)

ÇKS Ôðzú LJASÔS T2N2Y ÚKS T2NUð N2ð
 ôSÔ2YŞa ÚKS áú1-úúLYJ LJASÔS T2N1
 1-Y2ÚKS N N2ð* LYáú1-ft ÚKS Ôðzú ŞRŞS
 T1-ÔLYJ ÚKS Ø1-ft øLÚK ÚKS ŞEJ1-YaL2Y
 ØŞRŞS 1YJf1-ÔS* b2ð 1-YŞfS ÚKlå
 LJASÔS 1-YŞ ØØØJ lú lyú2 ÚKS T2NUð LJf1-YJ
 2T ÚKS T2NUð N2ð* ÇKS Ôðzú LJASÔŞa
 äK2dzfR ôS 1-Y1LYdzY 2T yb ØH ØYÚ
 1YfŞYúK (III)* /2YúlydzS ÚKS äSÔ2YŞ
 N2ð øLÚK 1-Fdzf LJASÔS LJf1-ÔLYJ ÚKS
 ú2YdzS 2T ÚKS f2YŞ äLŞS lyú2 ÚKS
 3N22ðS 2T T2NUð N2ð LJASÔS (IV)*

Move the end joints together until they are approximately 1/4" (6 mm) apart. Click the plank lengthwise into place. For the short edge, use the tapping block and a number of smaller taps until the planks click into place completely.

Do not attempt to knock the joint into place with one hit. Continue this method for each plank, covering the entire width of the room.

PLEASE NOTE: that the stagger between the head joints should be 8" (20 cm) minimum, and preferably 12" (30 cm). Cut the last planks of each row leaving a minimum 1/2" (13 mm) gap to the wall.

4) THE FINAL ROW

Measure and cut the planks of the final row so that there is a minimum 1/2" (13 mm) expansion/contraction space between the final row and the wall. These planks will be tapped into the last row using the **Last-Board Puller or TORLYS Bulldog™ tool**. Knock short edges together using TORLYS Tapping Block.

5) UNDER DOOR FRAMES

Saw the planks so that after installation there is a minimum 1/2" (13 mm) expansion/contraction space. This expansion/contraction space can be covered by undercutting the door jamb. If you cannot rotate this plank, use the TORLYS Tapping Block and hammer to tap the planks together.

TORLYS has designed a special tool for this type of installation: the TORLYS Bulldog™ tool.

6) COMPLETING THE INSTALLATION

After installing your floor, you can immediately walk on it and begin the final touches. This is one of the major benefits of the glue-less system. Remove all spacer blocks and install baseboards and/or quarter-rounds. Never attach the baseboard to the floor itself. You need to allow the floor to expand and contract underneath the baseboard. Finish around pipes with pipe collars or flexible silicone. Where no mouldings or baseboards can be installed, or where undercutting is not an option, fill the expansion/contraction gap with flexible silicone.

7) RADIANT HEAT APPLICATION

TORLYS Cork Vista is guaranteed for installation over radiant-heated subfloors. For details and limitations, please check the ["TORLYS Flooring Warranty and Instructions for installation over radiant-heated subfloors"](#).

Visit our website at: www.torlys.com for detailed information.

ATTN: INSTALLERS – CAUTION: Wood Dust

Sawing, sanding and machining wood products can produce wood dust. Airborne wood dust can cause respiratory, skin and eye irritation. The International Agency for Research on Cancer (IARC) has classified wood dust as a nasal carcinogen in humans.

Precautionary Measures: Power tools should be equipped with a dust collector. If high dust levels are encountered use an approved dust mask. Avoid dust contact with skin and eyes.

Head Office: TORLYS Inc.

1900 Derry Road E., Mississauga, Ontario, L5S 1Y6 Canada

www.torlys.com